


Installation instructions - Wallvent ECO / ROTO


Our wall-mounted horizontal vent provides ventilation solutions for basements, kitchens, bathrooms, workshops and wherever it is not possible to ventilate through the roof. Installation is very intuitive and simple.




STEP 1 : Before making the opening and installation, choose the place of installation and making the opening so that there is 12" space above the opening and 5" below the opening.

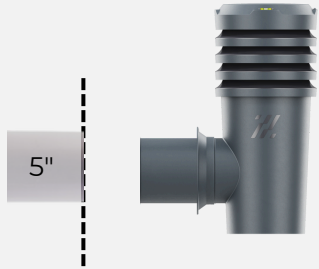

STEP 2 : We recommend preparing a 5" diameter hole in the wall for installation.

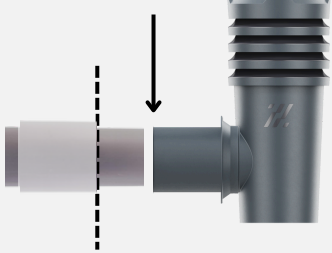

STEP 3 : Through this opening, lead the pipe that you will connect to the intake pipe of the vent. We recommend sealing the pipe connection with tape.

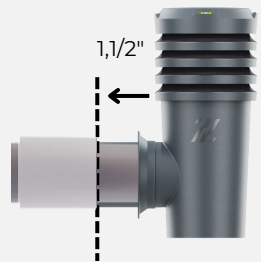

STEP 4 : Insert the vent into the opening maximum so that the turbine or vent rings are 1,1/2" away from the wall. Secure it in a vertical and horizontal position with shims. Bubble levels are built in for correct and easy setting.



STEP 5 : Foam the place between the intake pipe vent and the opening in the wall with fast cure foam sealant. When the foam cures, cut it trim with the wall and slide cover ring over.