

INSTALLATION INSTRUCTION

Cable penetration



1. The package contains base, body and accessories.





2. Install the base:

1. Mark the hole in the cover by drawing it on the cover from the inner hole of the base (1).

2. Cut out the traced hole (2). When cutting, remember to use the appropriate tools, adapted to the material being cut.



3. Clean and degrease the surface on which the butyl gasket will be fixed.

4. Tear off the tape securing the butyl seal (4), then place the base around the cut hole and press it down. Fasten with farmer screws in the following order - top screw, bottom screw and sides (5)

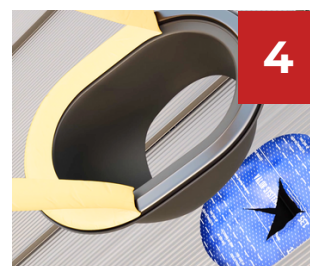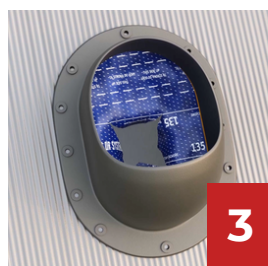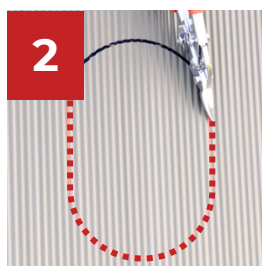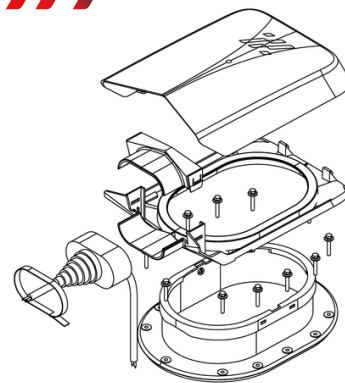

3. Click the body to the base.



4. Unclick the top of the body.

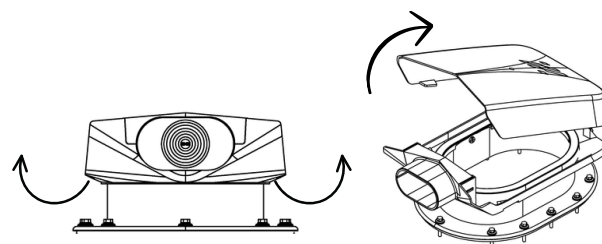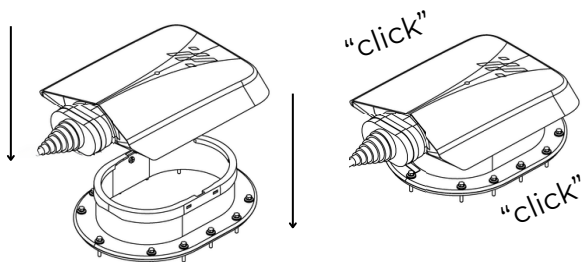

5. Unclick the cable outlet for easy cable installation.

6. Install the cable.

7. Click back the cable outlet.

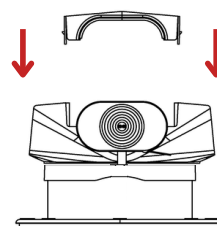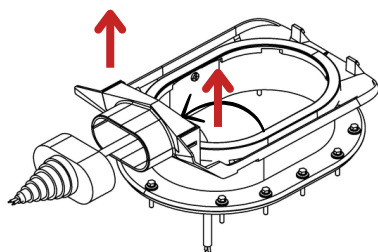

8. Make a tight hole in the EPDM gasket for the cable. Thread the seal onto the cable and slide it onto the cable outlet. The joint between the cable outlet of the body and EPDM seal must be sealed with roofing sealant. Secure the connection with the zip tape.

9. Click the top cover of the body on.

